

TABLE OF CONTENTS

	AEROFICHE CARD NO. 1	GRID NO.
I	INTRODUCTION	1A21
II	HANDLING AND SERVICING	1B2
III	INSPECTION	1E23
IV	STRUCTURES	1F15
V	SURFACE CONTROLS	1I19

AEROFICHE CARD NO. 2

VI	HYDRAULIC SYSTEM	2A8
VII	LANDING GEAR AND BRAKE SYSTEM	2G1

AEROFICHE CARD NO. 3

VIII	POWER PLANT (NORMALLY ASPIRATED)	3A8
VIIIA	POWER PLANT (TURBOCHARGED)	3D17
VIIIB	POWER PLANT (LYCOMING - TURBOCHARGED)	3H4
IX	FUEL SYSTEM	3I10

AEROFICHE CARD NO. 4

X	INSTRUMENTS	4A8
XI	ELECTRICAL SYSTEM	4C1

AEROFICHE CARD NO. 5

XII	ELECTRONICS	5A9
XIII	HEATING AND VENTILATING	5B5
XIV	ACCESSORIES AND UTILITIES	5H13

AIRPLANE SERIAL NUMBER LISTING

PA-23-250	Serial Nos. 27-1 to 27-504 incl.
PA-23-235	Serial Nos. 27-505 to 27-622 incl.
PA-23-250 (six place) "B"	Serial Nos. 27-2000 to 27-2504 incl.
PA-23-250 (six place) "C"	Serial Nos. 27-2505 to 27-3836 incl. and 27-3838 to 27-3943 incl.
PA-E23-250	Start at Serial No. 27-2997
PA-23-250 (six place) "D"	Serial Nos. 27-3837, 27-3944 to 27-4425 incl. and 27-4427 to 27-4573 incl.
PA-23-250 (six place) "E"	Serial Nos. 27-4426, 27-4574 to 27-7554168 incl.
PA-23-250 (six place) "F"	Serial Nos. 27-7654001 to 27-7654203 incl. 27-7754001 to 27-7754162 incl. 27-7854001 to 27-7854139 incl. 27-7954001 to 27-7954121 incl. 27-8054001 to 27-8054059 incl. 27-8154001 to 27-8154030

PIPER AZTEC SERVICE MANUAL

LIST OF ILLUSTRATIONS

Figure		Aerofiche Grid No.
2-1.	Three-View of PA-23-250 and PA-23-235	1B6
2-2.	Three-View of PA-23-250 (six place), Serial Nos. 27-2000 to 27-2504 incl.	1B7
2-3.	Three-View of PA-23-250 (six place), Serial Nos. 27-2505 to 27-4573 incl.	1B8
2-4.	Three-View of PA-23-250 (six place), Serial Nos. 27-4426 and 27-4574 to 27-7554168 incl.	1B9
2-5.	Three-View of PA-23-250, Model "F" Serial Nos. 27-7654001 to 27-7954121 incl.	1B10
2-6.	Three-View of PA-23-250, Model "F" Serial Nos. 27-8054001 and up	1B11
2-7.	Access Plates and Panels, PA-23-250 and PA-23-235	1C3
2-8.	Access Plates and Panels, PA-23-250 (six place)	1C5
2-9.	Torque Wrench Formula	1C9
2-10.	Station Reference Lines	1C13
2-11.	Jacking Arrangements	1C21
2-12.	Weighing	1C22
2-13.	Longitudinal Leveling	1C23
2-14.	Lateral Leveling	1C23
2-15.	Cherrylock Rivet Removal	1D8
2-16.	Hose/Line Markings	1D10
2-17.	Flareless Tube Fittings	1D11
2-18.	Maximum Distance Between Supports for Fluid Tubing	1D12
2-19.	Service Points, PA-23-250 and PA-23-235	1D15
2-20.	Service Points, PA-23-250 (six place), Serial Nos. 27-2000 to 27-2504 incl.	1D16
2-21.	Service Points, PA-23-250 (six place), Serial Nos. 27-2505 and up...	1D17
2-22.	Servicing Landing Gear Oleo Struts	1D19
2-23.	Oil Pressure Screen	1E5
2-24.	Oil Suction Screen	1E5
2-25.	Lubrication Chart, PA-23-250 and PA-23-235	1E11
2-26.	Lubrication Chart, PA-23-250 (six place), Serial Nos. 27-2000 to 27-2504 incl.	1E15
2-27.	Lubrication Chart, PA-23-250 (six place), Serial Nos. 27-2505 and up	1E19
3-1.	Inspection of Outboard Flap Hinge, Serial Nos. 27-3050, 27-3154 to 27-7405330 incl.	1F1
3-2.	Fuel Selector Valve Control Cables, PA-23-235, PA-23-250, and PA-23-250 (six place), Serial Nos. 27-2000 thru 27-7954076	1F3
3-3.	Fuel Selector Valve Control Cables, PA-23-250 (six place), Serial Nos. 27-7954077 and up	1F4
4-1.	Aileron and Flap Installation	1F21
4-2.	Fuselage Cradle	1G2
4-3.	Wing Installation	1G5
4-4.	Positioning of Front Spar Aligning Tool	1G7

PIPER AZTEC SERVICE MANUAL

LIST OF ILLUSTRATIONS (cont)

Figure		Aerofiche Grid No.
4-5.	Positioning of Main Spar Aligning Tool.....	1G7
4-6.	Emrennage Installation	1G13
4-7.	Windshield Installation. PA-23-250 and PA-23-235	1G16
4-8.	Windshield Installation. PA-23-250 (six place).....	1G17
4-9.	Side Window Installation (Typical), PA-23-250, PA-23-235 and PA-23-250 (six place), Serial Nos. 27-2000 to 27-2504 incl.....	1G20
4-10.	Side Window Installation (Typical), PA-23-250 (six place), Serial Nos. 27-2505 and up	1G20
4-11.	Emergency Exit Window Installation, PA-23-250 (six place)	1G23
4-12.	Cabin Entrance Door Latch Assembly	1H4
4-13.	Typical Access Plates and Panels	1H9
4-14.	Checking Stabilator Balance	1H11
4-15.	Stabilator Balance Weight - Rework	1H12
4-16.	Checking Rudder Balance	1H13
4-17.	Checking Aileron Balance	1H16
4-18.	Fuselage Frame Tubing	1H18
4-19.	Skin Materials and Thicknesses	1H20
4-20.	Skin Materials and Thicknesses, PA-23-250 (six place)	1H22
4-21.	Fabricated Tool, Wing Installation	1H24
4-22.	Fabricated Tool, Wing Installation	1H1
4-23.	Nose Cone Installation	1I3
4-24.	Removal of Nose Cone/ Radome	1I4
4-25.	Nose Cone/Radome	1I5
4-26.	Installation of Nose Cone/Radome	1I9
4-27.	Surface Scratches, Abrasions or Ground-in-Dirt	1I11
4-28.	Deep Scratches, Shallow Nicks and Small Holes.....	1I12
4-29.	Mixing or Epoxy Patching Compound	1I12
4-30.	Welding Repair Method	1I13
4-31.	Repairing of Cracks	1I13
4-32.	Various Repairs.....	1I14
4-33.	Repair of Stress Lines.....	1I16
4-34.	Repair of Impacted Damage	1I16
5-1.	Control Column Installation	1J5
5-2.	Correct Method of Installing Rod End Bearing.....	1J8
5-3.	Aileron Controls	1J9
5-4.	Installation of Aileron Bellcrank Rigging Tool	1J15
5-5.	Stabilator and Stabilator Trim Controls	1J20
5-6.	Stabilator Trim and Flap Interconnect System, PA-23-250, (six place), Serial Nos. 27-7654001 and up	1J24
5-7.	Leveling Stabilator, Serial Nos. 27-1 to 27-7554168 incl., and 27-80540001 and up	1K2
5-8.	Leveling Stabilator, Serial Nos. 27-7654001 to 27-7954121 incl.....	1K2
5-9.	Methods of Blocking Trim Cables	1K6
5-10.	Rudder and Rudder Trim Controls	1K11
5-11.	Clamping Rudder Pedals in Neutral	1K14
5-12.	Installation of Rudder Aligning Tool	1K14
5-13.	Trim Screw Assembly	1K22
5-14.	Flap Controls Installation	1K24
5-15.	Flap Rigging	1L2

PIPER AZTEC SERVICE MANUAL

LIST OF ILLUSTRATIONS (cont)

Figure		Aerofiche Grid No.
5-16.	Fabricated Tool, Aileron Rigging.....	1L15
5-17.	Fabricated Tool, Stabilator Leveling, Serial Nos. 27-1 to 27-7554168 incl., and 27-8054001 and up	1L16
5-18.	Fabricated Tool, Stabilator Leveling, Serial Nos. 27-7645001 to 27-7954121 incl.....	1L17
5-19.	Fabricated Tool, Rudder Rigging.....	1L18
5-20.	Fabricated Tool, Rudder Rigging, PA-23-250 (six place) "F" only...	1L19
6-1.	Hydraulic System Schematic, PA-23-250, PA-23-235 and PA-23-250 (six place), Serial Nos. 27-2000 to 27-2504 incl.	2A19
6-2.	Hydraulic System Installation, PA-23-250, PA-23-235 and PA-23-250 (six place), Serial Nos. 27-2000 to 27-2504 incl.	2A20
6-3.	Hydraulic System Schematic, PA-23-250 (six place), Serial Nos. 27-2505 to 27-4425 incl.; and 27-4427 to 27-4573 incl.	2A21
6-4.	Hydraulic System Installation, PA-23-250 (six place), Serial Nos. 27-2505 to 27-4425 incl.; and 27-4427 to 27-4573 incl.	2A22
6-5.	Hydraulic System Schematic, PA-23-250 (six place), Serial Nos. 27-4426 and 27-4574 to 27-7854050 incl.	2A23
6-6.	Hydraulic System Installation, PA-23-250 (six place), Serial Nos. 27-4426 and 27-4574 to 27-7954121 incl.	2A24
6-7.	Hydraulic System Schematic, PA-23-250 (six place), Serial Nos 27-7854051 to 27-7954121 incl.	2B1
6-8.	Hydraulic System Installation PA-23-250 (six place), Serial Nos. 27-8054001 and up	2B2
6-9.	Hydraulic System Schematic PA-23-250 (six place), Serial Nos. 27-8054001 and up.....	2B3
6-10.	Flow Diagram, Both Selector Levers Neutral.....	2B4
6-11.	Flow Diagram Landing Gear Selector Lever Up	2B4
6-12.	Flow Diagram, Landing Gear Selector Lever Down.....	2B5
6-13.	Flow Diagram, Flap Selector Lever Down.....	2B5
6-14.	Flow Diagram, Flap Selector Lever Up	2B6
6-15.	Hydraulic System Checking Diagrams, PA-23-250, PA-23-235, PA-23-250 (six place), Serial Nos. 27-2000 to 27-2504 incl.	2B13
6-16.	Hydraulic System Checking Diagrams, PA-23-250 (six place), Serial Nos. 27-2505 and up	2B15
6-17.	Hydraulic Pump, Exploded View	2C8
6-18.	Identification of Powerpak	2C11
6-19.	Location of Powerpak Components.....	2C17
6-20.	Hydraulic Powerpak, Exploded View	2C19
6-21.	Checking and Adjusting Powerpak	2D14
6-22.	Checking Powerpak Operation	2D14
6-23.	Hydraulic System Check Valve	2D23
6-24.	Anti-Retract Valve	2E2
6-25.	Adjustment of Anti-Retract Valve	2E4
6-26.	Shuttle Valve	2E6
6-27.	Nose and Main Landing Gear Actuating Cylinder	2E10

PIPER AZTEC SERVICE MANUAL

LIST OF ILLUSTRATIONS (cont)

Figure		Aerofiche Grid No.
6-28.	Flap Actuating Cylinder	2E11
6-29.	Nose Gear Door Actuating Cylinder	2E15
6-30.	Main Gear Door Actuating Cylinder	2E16
6-31.	Timer Check Valve	2E19
6-32.	Priority Valve	2E22
6-33.	Hydraulic Filter	2E24
6-34.	Emergency Gear Extender Cable Rigging	2F3
6-35.	Bypass Flow Valve	2F4
6-36.	Fabricated Work and Test Stand	2F19
6-37.	Fabricated Hook	2F20
6-38.	Fabricated Hook, Double	2F20
7-1.	Nose Gear Oleo Strut Assembly	2G9
7-2.	Nose Landing Gear Installation	2G14
7-3.	Adjustment of Nose Gear Drag Link and Latch Assembly	2G16
7-4.	Clamping Rudder Pedals in Neutral	2G18
7-5.	Rudder Pedals Neutral Angle	2G18
7-6.	Aligning the Nose Gear	2G20
7-7.	Mechanical Nose Gear Door Mechanism, PA-23-250, PA-23-235 and PA-23-250 (six place), Serial Nos. 27-2000 to 27-2504 incl.	2G22
7-8.	Hydraulic Nose Gear Door Mechanism, PA-23-250 (six place), Serial Nos. 27-2505 and up	2G24
7-9.	Main Gear Oleo Strut Assembly	2H3 & 2H4
7-10.	Main Landing Gear Installation (Left)	2H8
7-11.	Adjustment of Main Gear Drag Link and Latch Assembly	2H10
7-12.	Aligning Main Gear	2H12
7-13.	Mechanical Main Gear Door Mechanism, PA-23-250, PA-23-235 and PA-23-250 (six place), Serial Nos. 27-2000 to 27-2504 incl.	2H14
7-14.	Hydraulic Main Gear Door Mechanism, PA-23-250 (six place), Serial Nos. 27-2505 and up	2H16
7-15.	Deleted	2H18
7-16.	Deleted	2H18
7-17.	Adjustment of Nose Gear Up Limit Switch	2H20
7-18.	Adjustment of Main Gear Up Limit Switch	2H21
7-19.	Adjustment of Landing Gear Down Limit Switches	2H22
7-20.	Landing Gear Warning Switches	2H24
7-21.	Nose Wheel Assembly	2I1
7-22.	Main Wheel Assembly	2I2
7-23.	Brake Installation	2I4
7-24.	Wheel Brake Assembly (Typical)	2I8
7-25.	Wheel Brake Assembly, Latest Models of PA-23-250 (six place)	2I8
7-26.	Removal and Installation of Anchor Bolts	2I10
7-27.	Brake Master Cylinder Assembly	2I14
7-28.	Parking Brake Valve Assembly	2I16
7-29.	Bleeding Brakes	2I17
7-30.	Nose Gear Oleo Service Tolerances	2I19

PIPER AZTEC SERVICE MANUAL

LIST OF ILLUSTRATIONS (cont)

Figure		Aerofiche Grid No.
7-31.	Main Gear Oleo Service Tolerances	2I22
7-32.	Fabricated Tool, Checking Nose Wheel Alignment	2J4
7-33.	Tire Balancer	2J5
8-1.	Cowl Flap Installation	3A18
8-2.	Propeller Installation, PA-23-250, PA-23-235 and PA-23-250 (six place), Serial Nos. 27-2000 to 27-2504 incl.	3A20
8-3.	Typical Nicks and Removal Method	3A22
8-4.	Propeller Installation, PA-23-250 (six place), Serial Nos. 27-2505 and up.	3A24
8-5.	Propeller Governor	3B10
8-6.	Engine Installation, PA-23-250, PA-23-235 and PA-23-250 (six place), Serial Nos. 27-2000 to 27-2504 incl.	3B13
8-7.	Engine Installation, PA-23-250 (six place), Serial Nos. 27-2505 and up.	3B19
8-8.	Carburetor	3B24
8-9.	Schematic of RSA Fuel Injection System	3C2
8-10.	Fuel Injector	3C6
8-11.	Fuel Air Bleed Nozzle	3C7
8-12.	Magneto Inspection	3C8
8-13.	Contact Spring Inspection	3C9
8-14.	Impulse Coupling	3C9
8-15.	Magneto Timing Marks	3C12
8-16.	Timing Pointer	3C12
8-17.	Timing Kit Installed	3C14
8-18.	Breaker Compartment with Cast Timing Marks	3C14
8-19.	Engine Timing Marks	3C16
8-20.	Ignition System Schematic	3C18
8-21.	Removing Spark Plug Frozen to Bushing	3C19
8-22.	Adjustment of Ball Joint Exhaust System	3C24
8A-1.	Cowl Flap Installation	3D24
8A-2.	Propeller Installation	3E3
8A-3.	Typical Nicks and Removal Method	3E4
8A-4.	Propeller Governor	3E11
8A-5.	Engine Installation	3E15
8A-6.	Schematic of RSA Fuel Injection System	3E20
8A-7.	Fuel Injector	3E21
8A-8.	Fuel Air Bleed Nozzle	3E24
8A-9.	Contact Points	3F2
8A-10.	Contact Spring Inspection	3F2
8A-11.	Rotor Holding Tool Installed	3F4
8A-12.	Timing Kit Installed	3F4
8A-13.	Aligning Timing Marks	3F6
8A-14.	Forming Leads in Breaker Compartment	3F7
8A-15.	Engine Timing Mark	3F8
8A-16.	Magneto Timing Mark	3F8
8A-17.	Removal of Spring From Lead Assembly	3F9
8A-18.	Assembly Tool	3F10

PIPER AZTEC SERVICE MANUAL

LIST OF ILLUSTRATIONS (cont)

Figure		Aerofiche Grid No.
8A-19.	Using Assembling Tool.....	3F11
8A-20.	Measuring Lead Assembly Length.....	3F12
8A-21.	Cutting Metallic Braid From End of Lead.....	3F12
8A-22.	Unbraiding Metallic Shielding.....	3F12
8A-23.	Forming Shielding Around Ferrule.....	3F13
8A-24.	Ferrule Seating Tool.....	3F13
8A-25.	Needle.....	3F13
8A-26.	Measuring Wire.....	3F14
8A-27.	Installing Grommet Over Lead Assemblies.....	3F14
8A-28.	Lead Assembly Installed in Grommet.....	3F15
8A-29.	Wire Doubled Over for Installation of Eyelet.....	3F15
8A-30.	Ignition System Schematic.....	3F16
8A-31.	Removing Spark Plug Frozen to Bushing.....	3F18
8A-32.	Turbocharger System Diagram.....	3F22
8B-1.	Cowl Flap Installation.....	3H9
8B-2.	Engine Installation.....	3H15
8B-3.	Turbocharger System Diagram.....	3H20
9-1.	Fuel System Diagram (2 Valves), PA-23-250 and PA-23-250 (six place), Serial Nos. 27-2000 to 27-2222 incl.....	3I14
9-2.	Fuel System Diagram, PA-23-235 and PA-23-250 (six place), Serial Nos. 27-2223 to 27-2504 incl.....	3I15
9-3.	Fuel System Diagram, PA-23-250 (six place), Serial Nos. 27-2322 to 27-2504 incl.....	3I16
9-4.	Fuel System Diagram, PA-23-250 (six place), Serial Nos. 27-2505 to 27-3836; 27-3838 to 27-3943 incl.....	3I17
9-5.	Fuel System Diagram, PA-23-250 (six place), Serial Nos. 27-3937, 27-3944 to 27-7554172 incl.....	3I18
9-6.	Fuel System Diagram, PA-23-250 "F", Serial Nos. 27-7654001 and up.....	3I19
9-7.	Fuel System Diagram, PA-23-250 (six place), Serial Nos. 27-2582, 27-2686, 27-3135 and 27-4520.....	3I20
9-8.	Wing Tip Fuel Cell Installation.....	3I24
9-9.	Fuel Cell Installation, Serial Nos. 27-1 to 27-7654000 incl.....	3J2
9-10.	Fuel Cell Installation, Serial Nos. 27-7654000 and up.....	3J3
9-11.	Fuel Indicating System Wiring Schematic.....	3J10
9-12.	Check Fuel Quantity Sender.....	3J11
9-13.	Check Fuel Gauges Schematic.....	3J11
9-14.	Fuel Selector Valve.....	3J14
9-15.	Fuel Selector Valve Installation, PA-23-250 and PA-23-250 (six place), Serial Nos. 27-2000 to 27-2504 incl.....	3J15
9-16.	Fuel Selector Valve (Scott).....	3J18
9-17.	Fuel Selector Valve Installation, PA-23-235 and PA-23-250 (six place), Serial Nos. 27-2223 to 27-7305126 incl.....	3J19
9-18.	Fuel Selector Valve Port Positions.....	3J21

PIPER AZTEC SERVICE MANUAL

LIST OF ILLUSTRATIONS (cont)

Figure		Aerofiche Grid No.
9-19.	Fuel Selector Valve Installation, PA-23-235 and PA-23-250 (six place) (Dukes P/N 3654-00-1, -2)	3J23
9-20.	Fuel Crossfeed Valve	3K5
9-21.	Fuel Filter, PA-23-235, PA-23-250 and PA-23-250 (six place), Serial Nos. 27-2000 to 27-2504 incl.	3K8
9-22.	Fuel Filter, PA-23-250 (six place), Serial Nos. 27-2505 and up	3K8
9-23.	Bendix Electric Fuel Pumps (Early and Late)	3K12
9-24.	Weldon Rotary Fuel Pump	3K15
9-25.	Shaft Seal Installation	3K17
9-26.	Bench Test Set-Up (Typical)	3K19
9-27.	Engine Primer	3K21
9-28.	Fabricated Fuel Quantity Transmitter Checking Jig	3L1
9-29.	Fuel Selector Control Cables, PA-23-235, PA-23-250, and PA-23-250 (six place), Serial Nos. 27-2000 thru 27-7954076	3L3
9-30.	Fuel Selector Control Cables, PA-23-250 (six place), Serial Nos. 27-7954077 and up	3L4
10-1.	Instrument Panel, PA-23-250 and PA-23-235	4A11
10-2.	Instrument Panel, PA-23-250 (six place), Serial Nos. 27-2000 to 27-2504 incl.	4A12
10-3.	Instrument Panel, PA-23-250 (six place), Serial Nos. 27-2505 to 27-3153 incl.	4A13
10-4.	Instrument Panel, PA-23-250 (six place), Serial Nos. 27-3154 to 27-3836 and 27-3838 to 27-3943 incl.	4A14
10-5.	Instrument Panel, PA-23-250 (six place), Serial Nos. 27-3837, 27-3944 to 27-4425 and 27-4427 to 27-4573 incl.	4A15
10-6.	Instrument Panel, PA-23-250 (six place), Serial Nos. 27-4426 and 27-4574 to 27-7554172 incl.	4A16
10-7.	Dual Instrument Panel (Optional Equipment), PA-23-250 (six place), Serial Nos. 27-7305222, 27-7405235 to 27-7554172 incl.	4A17
10-8.	Instrument Panel, PA-23-250 (six place), Serial Nos. 27-7554001 to 27-7554168 incl.	4A18
10-9.	Instrument Panel (Typical), PA-23-250 (six place), Serial Nos. 27-7654001 and up	4A19
10-10.	Vacuum System, PA-23-250, Serial Nos. 27-1 to 27-443 incl.	4B3
10-11.	Vacuum System, PA-23-250, PA-23-235 and PA-23-250 (six place), Serial Nos. 27-2000 to 27-2504 incl.	4B5
10-12.	Vacuum System, PA-23-250 (six place), Serial Nos. 27-2505 and up	4B7
10-13.	Vacuum System, PA-23-250 (six place), Serial Nos. 27-3837, 27-3944 and up	4B8
10-14.	Vacuum System, Dual (Optional Equipment), PA-23-250 (six place), Serial Nos. 7305222 and 7405235 and up	4B9
11-1.	Generator Wiring System Schematic	4C12
11-2.	Sectional View of Generator	4C16
11-3.	Wiring Circuit	4C18

PIPER AZTEC SERVICE MANUAL

LIST OF ILLUSTRATIONS (cont)

Figure		Aerofiche Grid No.
11-4.	Current/Voltage Regulator	4C24
11-5.	Use of Riffler File to Clean Contact Points	4D4
11-6.	Voltage Regulator Air Gap	4D4
11-7.	Checking Voltage Setting - Fixed Resistance Method	4D5
11-8.	Checking Voltage Setting - Variable Resistance Method	4D5
11-9.	Adjusting Voltage Regulator Setting	4D6
11-10.	Cutout Relay Air Gap Check and Adjustments	4D8
11-11.	Cutout Relay Point Opening Check and Adjustment	4D8
11-12.	Checking Cutout Relay Closing Voltage	4D9
11-13.	Adjustment of Cutout Relay Closing Voltage	4D9
11-14.	Checking Current Regulator, Load Method	4D10
11-15.	Checking Current Regulator, Jumper Lead Method	4D10
11-16.	Checking and Adjusting Relay Air Gap	4D13
11-17.	Checking and Adjusting Relay Point Opening	4D13
11-18.	Checking Relay Closing Voltage	4D14
11-19.	Adjusting Relay Closing Voltage	4D14
11-20.	Alternator System Wiring Schematic (Delco-Remy)	4D17
11-21.	Cross-Sectional View of Alternator	4D18
11-22.	Checking Rotor	4D19
11-23.	Slip Ring End Frame	4D20
11-24.	Checking Stator	4D20
11-25.	Checking Diodes	4D21
11-26.	Brush Holder Assembly	4D23
11-27.	Exploded View of Heat Sink Assembly	4D24
11-28.	Alternator Output Check	4E1
11-29.	Volt - Ohmmeter Test	4E4
11-30.	Jumper Connection	4E4
11-31.	Regulator Checks	4E5
11-32.	Relay Tests	4E7
11-33.	Exploded View of Alternator	4E8
11-33a.	Alternator Blast Tube Routing	4E9
11-34.	Alternator System Wiring Schematic (Prestolite)	4E10
11-35.	Removal of Rectifier	4E11
11-36.	Removal of Slip Ring End Bearing	4E11
11-37.	Removal of Drive End Head	4E12
11-38.	Removal of End Head Bearing	4E12
11-39.	Testing Rotor for Grounds	4E13
11-40.	Testing Rotor for Shorts	4E13
11-41.	Installation of Bearing	4E14
11-42.	Installation of Rectifier	4E14
11-43.	Terminal Assembly	4E15
11-44.	Slip Ring End Bearing Assembly	4E15
11-45.	Testing Alternator	4E16

PIPER AZTEC SERVICE MANUAL

LIST OF ILLUSTRATIONS (cont)

Figure		Aerofiche Grid No.
11-46.	Brush Installation	4E17
11-47.	Internal Wiring Diagram	4E17
11-47a.	Alternator Paralleling System Wiring Schematic	4E21
11-48.	Regulator Diagram (Prestolite)	4F2
11-48a.	Regulator Diagram (Lamar)	4F2
11-49.	Testing Regulator (Prestolite)	4F5
11-49a.	Testing Regulator (Lamar)	4F6
11-49b.	Adjusting Regulator (Lamar)	4F7
11-50.	Application of Over-Voltage Control	4F9
11-51.	Testing Over-Voltage Control	4F9
11-52.	No-Load Test Hookup	4F15
11-53.	Lock-Torque Test Hookup	4F16
11-54.	Resistance Test Hookup	4F16
11-55.	Exploded View of Gear Reduction Starting Motor	4F20
11-56.	Turning Starting Motor Commutator	4F23
11-57.	Testing Motor Armature for Shorts	4F23
11-58.	Testing Motor Fields for Grounds	4F24
11-59.	No-Load Test Hookup	4G1
11-60.	Stall-Torque Hookup	4G1
11-61.	Landing Light Installation, PA-23-250 and PA-23-235	4G6
11-62.	Landing Light Installation, PA-23-250 (six place)	4G6

NOTE

Electrical Schematics for Section XI, see Grid 4C5.

12-1.	Two Year, Magnesium Battery Connection (Garrett)	5A11
12-2.	Five Year, Lithium Battery Connections (Garrett)	5A12
12-3.	Emergency Locator Transmitter Schematics (Garrett)	5A21
12-4.	Emergency Locator Transmitter Schematic (Communications Components Corp. Early Models)	5A22
12-5.	Emergency Locator Transmitter Schematic (Communications Components Corp. Later Models)	5A23
12-6.	Emergency Locator Transmitter Schematic (Narco)	5A23
12-7.	ELT Portable Folding Antenna (Narco)	5A24
12-8.	ELT Using Fixed Aircraft Antenna (Narco)	5A24
12-9.	Avionic Antenna Locations	5B1
13-1.	Heating and Ventilating System, PA-23-235 and PA-23-250, Serial Nos. 27-1 to 27-504 incl.	5B11
13-2.	Heating and Ventilating System, PA-23-250 (six place), Serial Nos. 27-2000 to 27-2504 incl.	5B12
13-3.	Heating and Ventilating System, PA-23-250 (six place), Serial Nos. 27-2505 to 27-3049, 27-3051 to 27-3153 incl.	5B13

PIPER AZTEC SERVICE MANUAL

LIST OF ILLUSTRATIONS (cont)

Figure		Aerofiche Grid No.
13-4.	Heating and Ventilating System, PA-23-250 (six place), Serial Nos. 27-3050, 27-3154 to 27-3836, 27-3838 to 27-3943 incl.	5B14
13-5.	Heating and Ventilating System, PA-23-250 (six place), Serial Nos. 27-3837, 27-3944 and up	5B15
13-6.	Heating and Ventilating System, PA-23-250 (six place), Serial Nos. 24-4426 and 27-4574 and up	5B16
13-7.	Flow System (South Wind Heater)	5B20
13-8.	Fuel Safety Valve (Cutaway View)	5B21
13-9.	Fuel Control Valve (Cutaway View)	5B24
13-10.	Wiring, Models 940-D and 940-DA	5C1
13-11.	Wiring, Models 940-DB and 940-K	5C1
13-12.	Heater Installation, PA-23-235 and PA-23-250	5C10
13-13.	Heater Installation, PA-23-250 (six place), Serial Nos. 27-2000 to 27-2504 incl.; PA-23-250 (six place), Serial Nos. 27-2505 to 27-3049, 27-3051 to 27-3153 incl.	5C12
13-14.	Flame Detector Switch (Cutaway View)	5C15
13-15.	Exploded Parts View, Heater Assembly	5D2
13-16.	Exploded Parts View, Ventilating Air Blower Assembly	5D4
13-17.	Ventilating Air Blower Motor	5D7
13-18.	Combustion Air Blower Motor	5D8
13-19.	Detail of Exhaust Extensions Installation	5D13
13-20.	Fuel flow Test Set Up	5D15
13-21.	Heater Assembly and Combustion Air Blower	5E2
13-22.	Diagramatic Cutaway of Heater to Show Wirling Flame Action	5E3
13-23.	Fuel Regulator and Shutoff Valve	5E4
13-24.	Top View - Duct Switch (Typical Control Lever Positions)	5E4
13-25.	Wiring Diagram	5E6
13-26.	Primary Power Circuit	5E10
13-27.	Starting Power Circuit	5E11
13-28.	Spark Plug Gap Adjustment	5E14
13-28a.	Spark Plug Fixture	5E18
13-28b.	Wiring - Test Setup	5E18
13-29.	Suggested Design for Seal Plate, Plugs and Caps for Combustion Tube Leakage Test	5F4
13-30.	Test Set-Up for Combustion Air Pressure Switch	5F5
13-31.	Exploded View of Heater Assembly No. 751 978 and No. 751 999.	5F8
13-32.	Exploded View - Combustion Air Blower and Motor Assembly No. 753 443	5F12
13-33.	Suggested Set-Up for Heater Operation Test	5F13
13-34.	Wiring connections for Heater Operation Test	5F14
13-35.	Heater Fuel Filter	5F17

PIPER AZTEC SERVICE MANUAL

LIST OF ILLUSTRATIONS (cont)

Figure		Aerofiche Grid No.
13-36.	Heater Fuel Valve	5F17
13-37.	Heater Assembly and Combustion Air Blower	5F19
13-38.	Diagrammatic Cutaway of Heater to Show Whirling Flame Action ...	5G2
13-39.	Fuel Regulator and Shutoff Valve	5G3
13-40.	Top View - Duct Switch (Typical Control Lever Position)	5G3
13-41.	Wiring Diagram	5G5
13-42.	Primary Power Circuit	5G8
13-43.	Starting Power Circuit	5G9
13-44.	Spark Plug Gap Adjustment and Tool	5G13
13-44a.	Spark Plug Fixture	5G15
13-44b.	Wiring - Test Setup	5G17
13-45.	Suggested Design for Seal Plate Plugs and Caps for Combustion Tube Leakage Test	5H1
13-46.	Test Setup for Combustion Air Pressure Switch	5H1
13-47.	Exploded View of Heater Assembly No. 755 257	5H7
13-48.	Exploded View of Combustion Air Blower and Motor Assembly No. 758 304	5H9
13-49.	Suggested Setup for Heater Operation Test	5H10
13-50.	Wiring Connection for Heater Operation Test	5H11
14-1.	Oxygen Tubing Installations	5H19
14-2.	Oxygen System Installation, PA-23-250	5H20
14-3.	Oxygen System Installation, PA-23-250 (six place), Serial Nos. 27-2000 to 27-3049 incl.; and 27-3051 to 27-3153 incl.	5H21
14-4.	Oxygen System Installation, PA-23-250 (six place), Serial Nos. 27-3154 to 27-3836 incl.; and 27-3838 to 27-3943 incl.	5H22
14-5.	Oxygen System Installation, PA-23-250 (six place), Serial Nos. 27-3837, 27-3944 and up	5H23
14-6.	Propeller De-Icer Installation, PA-23-250	5I6
14-7.	Propeller De-Icer Installation, PA-23-250 (six place)	5I6
14-8.	Electrical Diagram Showing Cycle Sequence, Phase 1	5I8
14-9.	Electrical Diagram Showing Cycle Sequence, Phase 2	5I8
14-10.	Electrical Diagram Showing Cycle Sequence, Phase 3	5I9
14-11.	Electrical Diagram Showing Cycle Sequence, Phase 4	5I9
14-12.	Relocating Bend in Deicer Lead	5I11
14-13.	Determining Brush Wear	5I12
14-14.	Determining Brush Wear	5I12
14-15.	Checking Slip Ring Run-Out	5I13
14-16.	Wear Pattern of Misaligned Brush	5I13
14-17.	Brush Block Positioning	5I15
14-18.	Schematic Wiring Diagram, PA-23-250; PA-23-235; and PA-23-250 (six place), Serial Nos. 27-2000 to 27-2504 incl.	5I18
14-19.	Schematic Wiring Diagram, PA-23-250 (six place), Serial Nos. 27-2505 and up	5I18

PIPER AZTEC SERVICE MANUAL

LIST OF ILLUSTRATIONS (cont)

Figure		Aerofiche Grid No.
14-20.	Brush Insert Assembly, PA-23-250; PA-23-235; and PA-23-250 (six place), Serial Nos. 27-2000 to 27-2504 incl.	5J3
14-21.	Brush Block Assembly, PA-23-250 (six place), Serial Nos. 27-2505 and up	5J4
14-22.	Holding Brushes for Soldering, PA-23-250; PA-23-235; and PA-23-250 (six place), Serial Nos. 27-2000 to 27-2504 incl.	5J5
14-23.	Holding Brushes for Soldering, PA-23-250 (six place), Serial Nos. 27-2505 and up	5J6
14-24.	Modular Brush Assembly	5J7
14-25.	Patching Deicer Lead Strap	5J12
14-26.	Spinner Dome Cushioning	5J13
14-27.	Hub Clamp Cushioning	5J14
14-28.	Propeller Blade in Low Pitch	5J16
14-29.	Propeller Blade in Feather Position	5J16
14-30.	Pneumatic Deicer Installation (Wet Vacuum Pump), Serial Nos. 27-2505 to 27-3944 incl.	5J18
14-31.	Pneumatic Deicer Installation (Dry Vacuum Pump), Serial Nos. 27-4510 to 27-7304963; 27-7304965 to 27-7304993 incl.	5J19
14-32.	Pneumatic Deicer Installation (Dry Vacuum Pump), Serial Nos. 27-7304964 to 27-7554168 incl.	5J20
14-33.	Pneumatic Deicer Installation (Dry Vacuum Pump), Serial Nos. 27-7554112 to 27-7554168 incl.	5J21
14-34.	28-Volt DC System, 3D1472 Timer	5J24
14-35.	14-Volt DC System, 3D1740 Timer	5J24
14-36.	Pneumatic Deicer System Schematic (Using Time Module)	5K1
14-37.	Pneumatic Deicer System Schematic (Airborne System)	5K1
14-38.	Propeller Synchronizer System Installation	5K20
14-39.	Synchronizer Schematic	5K22
14-40.	Mechanical Connections	5K23
14-41.	Fabricated Test Box	5L1
14-42.	Synchrophaser Installation	5L6
14-43.	Strobe Sensor	5L12
14-44.	Pulse Generator	5L13
14-45.	Computer Assembly	5L16
14-46.	Fabricated Test Box	5L17
14-47.	Electrical Schematic	5L17
14-48.	Strobe Sensor Internal Wiring Test Unit	5L18
14-49.	Strobe Sensor Simulator	5L18
14-50.	Patch Cable and Test Terminal	5L19
14-51.	Pulse Generator Simulator	5L19
14-52.	Synchrophaser Schematic, PA-23-250 (six place), Serial Nos. 27-7854068 and up	5L21

INTENTIONALLY LEFT BLANK

PIPER AZTEC SERVICE MANUAL

LIST OF TABLES

Table		Aerofiche Grid No.
II-I.	Leading Particulars and Principle Dimensions	1B13
II-II.	Consumable Materials	1B21
II-III.	Flair Fitting Torques.....	1C10
II-IV.	Recommended Nut Torques	1C11
II-V.	Conversion Tables	1C15
II-VI.	Decimal/Millimeter Equivalents of Drill Sizes	1C20
II-VII.	Paint Materials	1D6
II-VIII.	Propeller Chamber Pressure Requirements with Temperature	1D24
II-IX.	Indicated Oxygen Cylinder Pressure vs. Ambient Temperature	1E3
II-X.	Recommended Lubricating Oils	1E8
II-XI.	Thread Lubricants	1E9
III-I.	Inspection Report	1F5
IV-I.	List of Materials (Thermoplastic Repair)	1I10
V-I.	Control Surface Travel and Cable Tension	1I23
V-II.	Troubleshooting Chart (Surface Controls)	1L7
VI-I.	Leading Particulars, Hydraulic System	2A17
VI-II.	Leading Particulars, Powerpak Assembly.....	2A18
VI-III.	Inspection and Repair, Engine-Driven Hydraulic Pump	2C7
VI-IV.	Special Tools and Test Equipment.....	2C23
VI-V.	Hydraulic System Troubleshooting	2F5
VI-VI.	Powerpak Troubleshooting	2F8
VI-VII.	Powerpak Parts List	2F11
VI-VIII.	Powerpak Service Limits	2F17
VII-I.	Wheel and Brake Wear Limits	2I3
VII-II.	Landing Gear Oleo Service Tolerances 19273-02 Nose Gear.....	2I20
VII-III.	Landing Gear Oleo Service Tolerances 19272-02 Main Gear	2I23
VII-IV.	Landing Gear and Brake System Troubleshooting	2J1
VIII-I.	Propeller Specifications - PA-23-250; PA-23-235 and PA-23-250 (six place), Serial Nos. 27-2000 to 27-2504 incl.	3A23
VIII-II.	Propeller Specifications - PA-23-250 (six place), Serial Nos. 27-2505 and up	3B1
VIII-III.	Engine Troubleshooting (Carburetor)	3D2
VIIIA-I.	Propeller Specifications	3E6
VIIIA-II.	Engine Troubleshooting (Fuel Injection).....	3G12
VIIIB-I.	Engine Troubleshooting	3H24
IX-I.	Fuel System Troubleshooting	3K23
IX-II.	Fuel System Pressures	3L2
X-I.	Instrument Markings - PA-23-250; PA-23-235 and PA-23-250 (six place), Serial Nos. 27-2000 to 27-2504 incl. with Carburetor Induction System	4B12

PIPER AZTEC SERVICE MANUAL

LIST OF TABLES (cont)

Table		Aerofiche Grid No.
X-II.	Instrument Markings - PA-23-250 (six place), Serial Nos. 27-2322 and up with Fuel Injected Induction System or AiResearch Turbocharger	4B13
X-III.	Instrument Troubleshooting	4B14
XI-I.	Index - Electrical System Schematics	4C5
XI-II.	Summary of Alternator Checks	4E3
XI-III.	Electrical System Troubleshooting	4G12
XI-IV.	Lamp Replacement Guide	4G23
XI-V.	Circuit Load Chart	4H1
XI-VI.	Electrical Wire Coding	4H8
XI-VII.	Electrical Symbols	4H9
XIII-I.	Heater Troubleshooting (South Wind)	5C21
XIII-II.	Heater Troubleshooting (Janitrol) 14 Volt	5D20
XIII-III.	Heater Troubleshooting (Janitrol) 28 Volt	5F20
XIV-I.	Propeller Deicer System Troubleshooting	5I19
XIV-II.	Pneumatic Deicer Operating Pressures	5K3
XIV-III.	Pneumatic Deicer System Troubleshooting	5K15
XIV-IV.	Troubleshooting Chart (Propeller Synchronizer)	5L2
XIV-V.	Troubleshooting Chart (Engine Synchrophaser)	5L20